Copy Stand Guide







Table of Contents

• Warranty	4
• Introduction	5
Parts included	5
Installing the baseboard	6
Installing the adjustable rail	8
Using the copy stand with adjustable rail	10

DISCLAIMER

- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions.
- OR Technologies reserves the right to change the specifications of the hardware and software described herein at any time without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language in any form, by any means, without the prior written permission of OR Technologies.
- OR Technologies makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, the OR Technologies lighting systems, personal computers or peripheral devices.



Copy Stand Guide

Please make sure the system arrives in perfect condition and all parts are included. Contact us immediately if there is any damage or if you are missing any parts.

ONE YEAR WARRANTY

Defective components will be replaced during the 12 month warranty period. No charge will be made for labor costs during this period. Proof of purchase must be provided to verify the warranty status. Shipping is not included.



Introduction

Thank you for choosing our Copy Stand for the OR Technologies new lighting systems. This Guide allows you to understand how to use this high quality accesory in the following systems:

- Photo-eBox Plus
- Photo-eBox Plus 1419
- Photo-eBox Plus 2032

Parts Included



• Note: Accessories and parts included may differ from pictures on this manual, please check our website (www.mkdigitaldirect.com) for the most up-to-date information.

Installing the baseboard

Please look carefully at the pictures so you fully understand the components and their proper positions. Your purchase should include:

- 1. One baseboard
- 2. One upright or column post
- 3. One adjustable rail

First step: Mount the upright to the baseboard





Top view Bottom view

Screws will be attached from the bottom of baseboard into the upright.



• Take the 4 long screws and place them through the holes of the bottom side of the baseboard. Slide the upright into the screws. Tighten with fingers and then use the proper tool to secure the upright to the baseboard.

• After you mount the baseboard and the column post you copy stand should look as follows.




• Now you just need to mount the adjustable rail to the copy stand.

Installing the adjustable rail

• To install the adjustable rail to the copy stand do the following:



• Mount the adjustable rail on top of the copy stand by inserting the 2 short screws inside the two holes like the following picture.

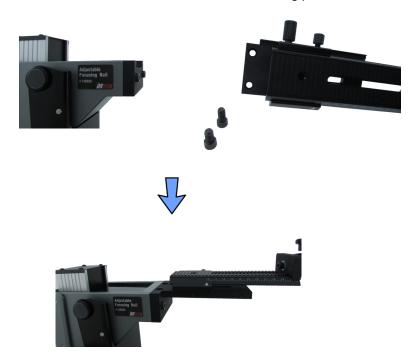

• The adjustable rail with the copy stand assembly should looks like the following picture.




• Finally, mount the camera on the ballhead.




Using the copy stand with adjustable rail

• To move the camera up and down just grasp the quick release handle and squeeze, move into position, and release.

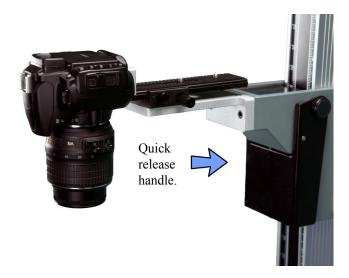

• To move the camera to the front or to the back of your lighting system use your adjustable rail, untight the small knob, move into position with the big knob, and then tight the small knob again.

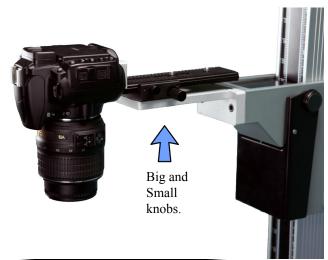

 You can also move your camera in angle, to do that you just need to untight the knob at the top, move at the angle that you need, and then tight the knob back.







www.mkdigitaldirect.com | info@mkdigitaldirect.com Tel: (619) 661-0628 | Toll Free: (800) 258-6230 861 Harold Place Suite 209, Chula Vista, California 91914