

# Rotating Platform Product Manual



360RP20 &  
360RP25

# Table of Contents

---

- Parts Included ..... 4
- Benefits and Features ..... 5
- System Setup ..... 5
- Using the Rotating Platform ..... 7
- Warranty ..... 7
- Battery Replacement ..... 7
- Specifications ..... 8

## DISCLAIMER

- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions.
- OR Technologies reserves the right to change the specifications of the hardware described herein at any time without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language in any form, by any means, without the prior written permission of OR Technologies.



# Rotating Platform Product Manual

---

*Please make sure the system arrives in perfect condition and all parts are included.  
Contact us immediately if there is any damage or if you are missing any parts.*

## Introduction

---

Thank you for choosing the OR Technologies Rotating Platform. This guide will help you understand how to setup your Rotating Platform 360RP20 or 360RP25. The steps are very easy to understand and after your finish the setup process, you will be able to start taking pictures to create a wonderful 360 view of your products. If you need to generate a 360° view of your product on the computer you will need the Advance Rotating Platform Control (sold separately), for more information please visit our website [www.or-tech.com](http://www.or-tech.com).

## Parts Included

- 1 Rotating Platform (20 or 25 cm diameter)
- 1 Rotating Platform Connection Cable
- 1 Remote Control Switch



## Parts Not Included

- Advance Rotating Platform Control is not included.

With the help of this control, you can create a 360° view of your product by controlling your camera and the rotating platform to generate a sequence of images from different angles. To get more information please visit our website [www.or-tech.com](http://www.or-tech.com)



- *Note: Accessories and parts included may differ from those listed in this manual, please check our website ([www.or-tech.com](http://www.or-tech.com)) for the most up-to-date information.*

## Benefits and Features

- Create a sequence of images to generate a 360 view of any product with the help of the Advance Rotating Platform Control PV360 (sold separately please see previous page of this manual for more details).
- Platform rotates full 360 degrees in both Directions.
- 36 Markers (small dents), one every 10 degrees.
- 2 rotating speeds (by switching a gear's side)
- Easily record 360° product videos and optimize them for eCommerce.

## System Setup

1. Connect the control (Cable on **Picture #1**) to the platform. Please make sure that the cable goes all the way in to keep a good communication between the control and the rotating platform (**Picture #2**).

Picture #1



Picture #2



2. Connect the cable to the control (Picture #3). Please make sure that the cable goes all the way in to keep a good communication between the control and the rotating platform (Picture #4).

Picture #3



Picture #4



3. There are two different speeds for the platform depending on the gear position (Picture #5).



Gear on slow position



Gear on fast position


## Using the Rotating Platform

Using the rotating platform is simple, after you connect everything you should be able to rotate the platform clockwise or counterclockwise by pressing the switch from the control.

## Battery replacement

To replace the battery first take out the metal battery holder (Picture #5), then remove the battery and place the new one by pressing the spring with a ruler (Picture #6), after that just place the metal battery holder back.

Picture #5

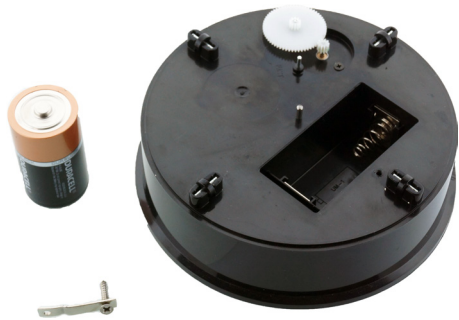

Picture #6



## **ONE YEAR WARRANTY**

Defective components will be replaced during the 12 month warranty period. No charge will be made for labor costs during this period. Proof of purchase must be provided to verify the warranty status.

## Specifications

Platform available in diameter of 20 or 25 cm.

Battery operated (included)

Speed of one full turn: 12 sec (slow) or 6 (fast)

Dimensions: 20 x 20 x 5.5 cm (8x8x2.25") or 25 x 25 x 5.5 cm (10x10x2.25")

Two feet long cable included

One year warranty



**[www.or-tech.com](http://www.or-tech.com)** | [info@or-tech.com](mailto:info@or-tech.com)

Tel: (619) 661-0628 | Toll Free: (800) 258-6230

861 Harold Place Suite 209,  
Chula Vista, California 91914